

Procédure Serveur FOG Project

Cyrus Dehghan – S3P1

<https://cyrusdehghan60.wixsite.com/cyrusdehghanportefol>



FOG Server est une solution open source de déploiement de systèmes d'exploitation qui permet d'installer et de cloner automatiquement des ordinateurs via le réseau. Dans une infrastructure Proxmox, il est généralement installé dans une machine virtuelle Linux et joue le rôle de serveur central pour envoyer des images Windows ou Linux aux postes clients qui démarrent en PXE. Cela évite les installations manuelles, fait gagner beaucoup de temps et facilite la gestion d'un parc informatique. FOG est donc un outil très utilisé en administration système pour le déploiement rapide et standardisé des postes de travail.

Etape 3 :

Une série de question concernant les réglages de Fog Server va être posée ensuite à répondre par y/n selon les besoins de son infra ↓

```
Would you like to change the default network interface from ens18?
If you are not sure, select No. [y/N] n

Would you like to setup a router address for the DHCP server? [Y/n] y
What is the IP address to be used for the router on
the DHCP server? [192.168.10.254]y
Invalid router IP Address!

Would you like to setup a router address for the DHCP server? [Y/n] y
What is the IP address to be used for the router on
the DHCP server? [192.168.10.254]

Would you like DHCP to handle DNS? [Y/n] yy
Invalid input, please try again.

Would you like DHCP to handle DNS? [Y/n] y
What DNS address should DHCP allow? [192.168.10.1] y
Invalid DNS IP address!

Would you like DHCP to handle DNS? [Y/n] y
What DNS address should DHCP allow? [192.168.10.1]

Would you like to use the FOG server for DHCP service? [y/N] y

This version of FOG has internationalization support, would
you like to install the additional language packs? [y/N] y

Using encrypted connections is state of the art on the web and we
encourage you to enable this for your FOG server. But using HTTPS
has some implications within FOG, PXE and fog-client and you want
to read https://wiki.fogproject.org/HTTPS before you decide!
Would you like to enable secure HTTPS on your FOG server? [y/N] n

Which hostname would you like to use? Currently is: SRV-FOG
Note: This hostname will be in the certificate we generate for your
FOG webserver. The hostname will only be used for this but won't be
set as a local hostname on your server!
Would you like to change it? If you are not sure, select No. [y/N] y
Which hostname would you like to use? SRV-FOG
FOG would like to collect some data:
We would like to collect the following information:
  1. OS Name (CentOS, RedHat, Debian, etc....)
  2. OS Version (8.0.2004, 7.2.1409, 9, etc....)
  3. FOG Version (1.5.9, 1.6, etc....)

What is this information used for?
We would like to simply track the common types of OS
being used, along with the OS Version, and the various
versions of FOG being used.

Are you ok with sending this information? [Y/n] y
```

Une fois le récap bon, on va dire « y » pour lancer l'installation ↓

```
* Here are the settings FOG will use:
* Base Linux: Debian
* Detected Linux Distribution: Debian GNU/Linux
* Interface: ens18
* Server IP Address: 192.168.10.100
* Server Subnet Mask: 255.255.255.0
* Hostname: SRV-FOG
* Installation Type: Normal Server
* Internationalization: Yes
* Image Storage Location: /images
* Using FOG DHCP: Yes
* DHCP router Address: 192.168.10.254
* Send OS Name, OS Version, and FOG Version: Yes

* Are you sure you wish to continue (Y/N) y



* Installation Started
```

Une fois tout les modules installés il nous indique la page web du serveur, on va pouvoir y accéder pour mettre en place la database

```
* You still need to install/update your database schema.  
* This can be done by opening a web browser and going to:  
  
http://192.168.10.100/fog/management  
  
* Press [Enter] key when database is updated/installed.
```

Etape 4 :

On va lancer l'installation de la Database :

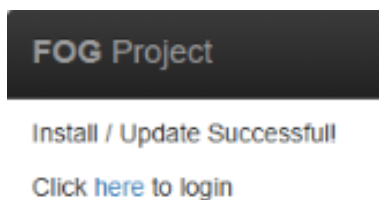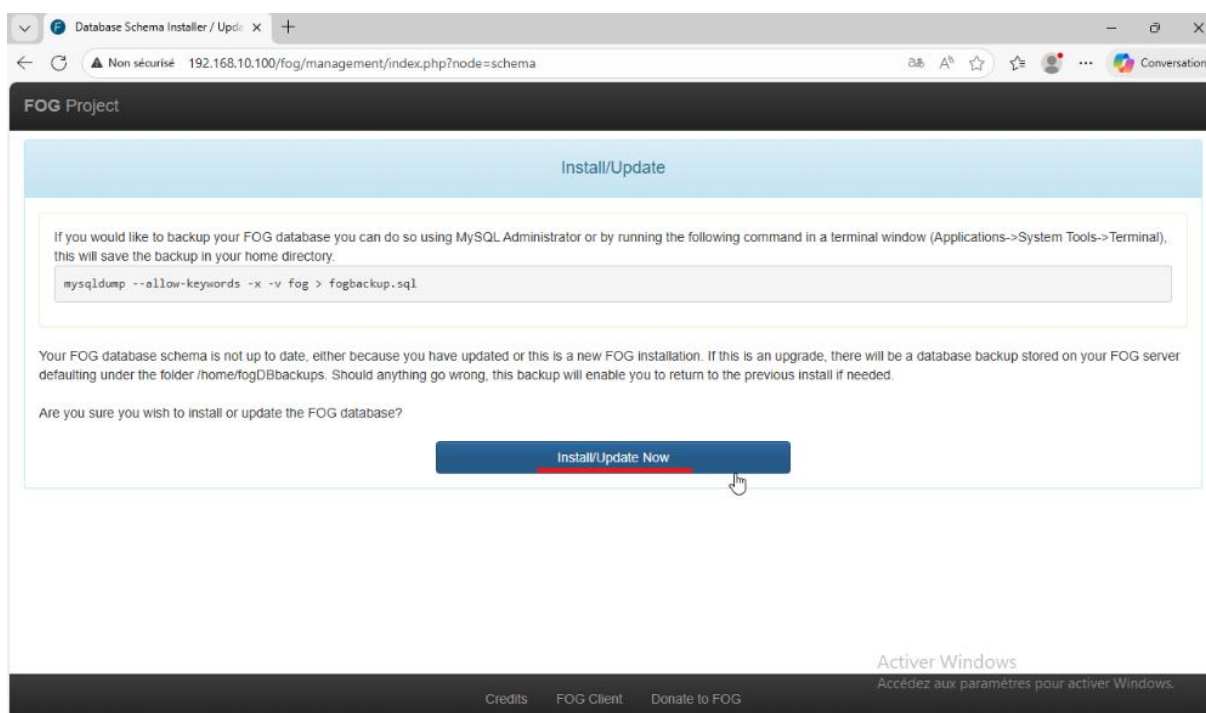

Une fois l'installation complétée on retourne sur notre terminal et on va presser
« Entrée »

```
* Setup complete

You can now login to the FOG Management Portal using
the information listed below. The login information
is only if this is the first install.

This can be done by opening a web browser and going to:

http://192.168.10.100/fog/management

Default User Information
Username: fog
Password: password

* Changed configurations:

The FOG installer changed configuration files and created the
following backup files from your original files:
* /etc/dhcp/dhcpd.conf <=> /etc/dhcp/dhcpd.conf.1770387298
* /etc/vsftpd.conf <=> /etc/vsftpd.conf.1770387298
* /etc/exports <=> /etc/exports.1770387298

root@SRV-FOG:/opt/fogproject/bin#
```

Une fois cela fait, il nous indique l'username et le mot de passe de notre FOG web ↑

Etape Intermédiaire :

Si cela n'est pas fait encore, on n'oublie pas de changer les paramètres IPv4 du
Serveur

Annuler

Filaire

Appliquer

Détails Identité IPv4 IPv6 Sécurité

Méthode IPv4

☐ Automatique (DHCP)

☒ Manuel

☐ Partagée avec d'autres ordinateurs

☐ Réseau local seulement

☐ Désactiver

Adresses

Adresse	Masque de réseau	Passerelle	
192.168.10.8	255.255.255.0	192.168.10.254	✕
			✕

DNS

Automatique ☒

192.168.10.1, 8.8.8.8

Séparer les adresses IP avec des virgules

Etape 5 :

On va maintenant se connecter à l'interface web de FOG Project et y rentrer notre id/pw ↓

The image shows two screenshots of the FOG Project web interface. The top screenshot is the login page, and the bottom screenshot is the main dashboard.

Top Screenshot: Login Page

The browser address bar shows the URL: `192.168.10.8/fog/management/index.php`. The page title is "FOG Project". The login form includes:

- Username:** `fog`
- Password:** `*****`
- Language:** `English`
- Login Button:** `Login`

Below the login form, the following statistics are displayed:

- Estimated FOG Sites: `4614`
- Latest Version: `1.5.10.1754`
- Latest Development Version: `1.5.10.1763`

The bottom of the page features a footer with links for `Credits`, `FOG Client`, and `Donate to FOG`, along with an "Activier Windows" message.

Bottom Screenshot: Dashboard

The dashboard is titled "Tableau de bord" and contains three main sections:

- System Overview:** Server information at a glance. It displays:
 - Username: `fog`
 - Web Server: `192.168.10.8`
 - Load Average: `0.01, 0.07, 0.10`
 - System Uptime: `Up: 0 days 1 hr 55 mins`
- Storage Group Activity:** Selected groups's current activity. It shows a donut chart with `100%` completion. The legend indicates:
 - Free: `10`
 - Queued: `0`
 - Active: `0`
- Storage Node Disk Usage:** Selected node's disk usage. It shows a yellow box with the text: `Node Offline` and `Node is unavailable`.

At the bottom of the dashboard, there is a section titled "Imaging Over the last 30 days" with a table showing 1 entry.

The footer of the dashboard includes the same links as the login page, along with the "Activier Windows" message and the version number: `Version 1.5.10.1754`.

L'installation de FOG Project est terminée !